
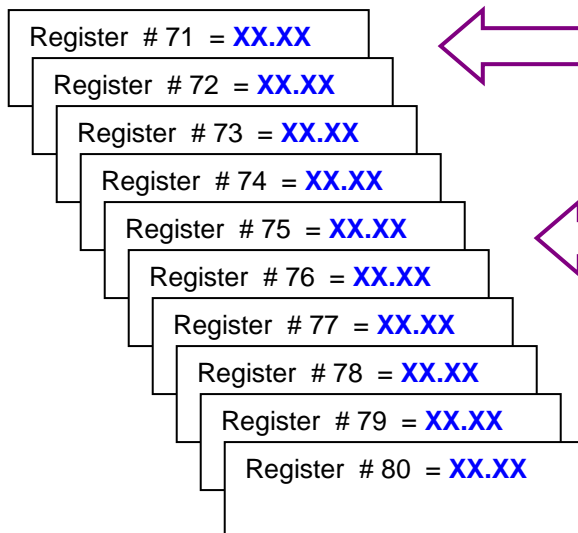 


The Application Note is pertinent to the Commander SK Family


Accessing Parameters Outside Menu 0

One of the major differences between the Commander SE and the Commander SK series drives is that with the SK, one can access the “higher level” drive parameter from the drives keypad whereas with the Commander SE you must use the drive software and programming cable. This is achieved by “mapping” up to 10 parameters of interest into the 70’s menu and after this mapping, one can adjust those selected parameters in the corresponding 60’s menu. If more than 10 parameters need to be modified, one could modify the first group, then change the 70 group parameters to a new set and change them. Remember, since you are working with the keypad menu, they are automatically saved.

Enter Parameters you need to access

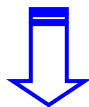

Change the value of the parameter

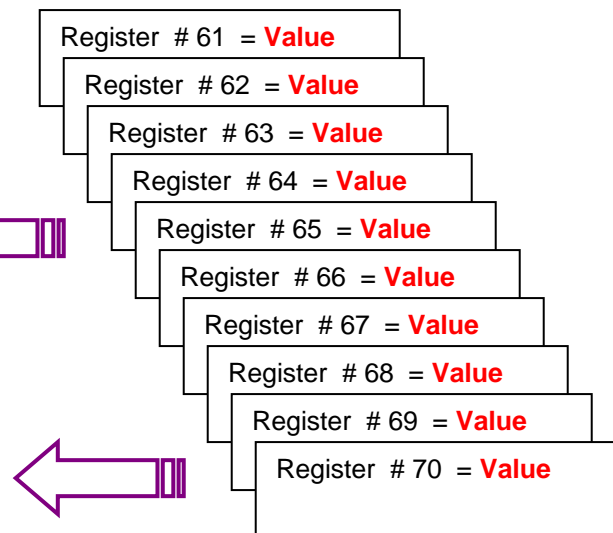

Programming a Parameter



1. Initial Display or
2. Press mode *Flashing* then 10 times *Flashing*
3. Press mode then 2 times *flashing* to change to level 3 security
4. Press mode *Flashing* then press and hold *Flashing*
5. Press mode *Flashing* The value can be changed with up / down arrows
7. Press and hold mode press once and let mode go *Flashing* The value can be changed with up / down arrows
8. Press and hold mode press once and let mode go *Flashing* The value can be changed with up / down arrows

9. In step 7 and 8 above, using the down arrow  instead of the up arrow  will index the flashing digit to the right.

10. Press mode  and the index will flash

71 1.21

Or if you'd rather see a Video on how to do this click the following link:



[CTVI101](#)

Questions: Ask the author ??

Steve Zaleski Email: <mailto:steve.zaleski@emersonct.com>

Tel: 716-774-1193