

The Application Note is specific to the products that can host a SM-Ethernet module.
This includes our Unidrive SP, Commander GP20 and Commander SK families.

SM-Ethernet Configuration Save, Restore and Re-initialization

Scope – There has been some confusion regarding the use of three of the SM-Ethernet Module’s advanced parameters:

- Parameter **MM.31** “SM-Ethernet **Save** option (backup)”
- Parameter **MM.32** “SM-Ethernet **Re-Initialize**”
- Parameter **MM.33** “SM-Ethernet **Restore** parameters”.

This application note will attempt to clarify these parameters and their use of with an illustration and some typical examples of when and how you would need to use these parameters.



